

CASIO®

SUPER-FX

fx-3600P_V

ENGLISH	1
ESPAÑOL	41
FRANÇAIS	81
中文	121
한국어	162
BAHASA INDONESIA	202

英 西 仏 中 韓 印 度

KEY INDEX

GENERAL KEYS

Key	Function	Page
ON	ON	5, 10
0 - 9 , .	Data entry	10
+ , - , × , ÷ , =	Basic calculation	10
AC	All clear	9, 32, 34
C	Clear	9, 33
±	Sign change	8

MEMORY KEYS

Key	Function	Page
MR	Independent memory recall	9, 11
M_{in}	Independent memory in	11
M+	Memory plus	11
M-	Memory minus	12
K_{out}	Constant memory recall	12
K_{in}	Constant memory in	12

SPECIAL KEYS

Key	Function	Page
SHIFT	Shift	12
MODE	Mode	5, 10, 15, 18, 21, 23, 25, 29, 36
() , []	Parentheses	10
EXP	Exponent	8, 29
π	Pi	18
DRG , DRD	Sexagesimal notation/decimal notation conversion	18

Key	Function	Page
X_→Y	Register exchange	10
X_→K	Register exchange	13
RND	Rounding off internal value	21

BASE-N KEYS

Key	Function	Page
DEC	Decimal	15
BIN	Binary	15
HEX	Hexadecimal	15
OCT	Octal	15
A - F	Hexadecimal numbers entry	15
AND	And	17
OR	Or	17
XOR	Exclusive Or	17
KNOR	Exclusive Nor	17
NOT	Not	17
NEG	Negative	16

FUNCTION KEYS

Key	Function	Page
sin	Sine	18
cos	Cosine	18
tan	Tangent	18
sin⁻¹	Arc sine	19
cos⁻¹	Arc cosine	19
tan⁻¹	Arc tangent	19
hyp	Hyperbolic	19
log	Common logarithm	19
10^x	Common antilogarithm	20
ln	Natural logarithm	20
e^x	Natural antilogarithm	20

Key	Function	Page
$\sqrt{}$	Square root	20
x^2	Square	20
ENG, $\frac{\square}{\square}$	Engineering	21
$\frac{\square}{\square}$, $\frac{\square}{\square}$	Fraction	13, 14
$\sqrt[3]{}$	Cube root	20
$1/x$	Reciprocal	19, 20
$x!$	Factorial	20
x^y	Power	20
$\sqrt[x]{y}$	Root	20
R \rightarrow P	Rectangular to polar	22
P \rightarrow R	Polar to rectangular	22
%	Percent	14
RAN#	Random number	21
nPr	Permutation	22
nCr	Combination	22

STATISTICAL KEYS

Key	Function	Page
KAC	Statistical register clear	23
DATA	Data entry	23
DEL	Data delete	24
X_{0-9}	Regression analysis data entry	25
$\sqrt{\sigma_{n-1}}$, $\sqrt{\sigma_{n-1}}$	Sample standard deviation	23
$\sqrt{\sigma_n}$, $\sqrt{\sigma_n}$	Population standard deviation	23
\bar{x} , \bar{y}	Arithmetic mean	23
n	Number of data	23
$\sum x$, $\sum y$	Sum of value	23
$\sum x^2$, $\sum y^2$	Sum of square value	23
$\sum xy$	Sum of value product	
A	Constant term	25

Key	Function	Page
B	Regression coefficient	25
r	Correlation coefficient	25
\hat{x} , \hat{y}	Estimator	26

PROGRAMMING KEYS

Key	Function	Page
P1, P2	Program number	30, 31
RUN	RUN	29
HLT	HLT	31
ENT	ENT	29
RTN	Unconditional jump (return)	33
$x > 0$, $x \leq 0$	Conditional jump	34
PCL	Program clear	33

Before starting calculation, be sure to press the **ON** key and to confirm that "0." is shown on the display.

**Special care should be taken not to damage the unit by bending or dropping. For example, do not carry it in your hip pocket.*











INDEX

1/GENERAL GUIDE	5
2/ORDER OF OPERATIONS AND LEVELS	7
3/CALCULATION RANGE AND SCIENTIFIC NOTATION	8
4/CORRECTIONS	9
5/OVERFLOW OR ERROR CHECK	9
6/POWER SOURCE	9
7/NORMAL CALCULATIONS	10
8/BINARY/OCTAL/DECIMAL/HEXADECIMAL CALCULATIONS	15
9/FUNCTION CALCULATIONS	18
10/STATISTICAL CALCULATIONS	23
11/PROGRAMMED CALCULATIONS	29
12/INTEGRALS	36
13/SPECIFICATIONS	38

1/GENERAL GUIDE

1-1 Modes


To put the calculator into a desired operating mode, or to select a specific angular unit, press **MODE** first, then **□**, **EXP**, **0**, **1**, ..., or **9**.

- MODE**  - RUN mode. Carry out manual calculation and program execution.
- MODE**  - LRN is displayed. Program can be written.
- MODE**  - BASE-N is displayed. Carry out Binary/octal/decimal/hexadecimal conversions, calculations and logical operations.
- MODE**  **1** - $\int dx$ is displayed. Integral can be carried out.
- MODE**  **2** - LR is displayed. Calculate regression analysis.
- MODE**  **3** - SD is displayed. Calculate standard deviation.
- MODE**  **4** - **D** is displayed. Use degrees as the unit of angle measurement.
- MODE**  **5** - **R** is displayed. Use radians as the unit of angle measurement.
- MODE**  **6** - **G** is displayed. Use grads as the unit of angle measurement.
- MODE**  **7** - Press any number from 0 to 9 to indicate how many decimal places you want displayed (FIX is displayed).

MODE 8 - Press any number from 1 (1 digit) to 0 (10 digits) to indicate how many significant digits you want displayed (SCI is displayed).

MODE 9 - Releases instructions entered in **MODE 7** and **MODE 8**. This operation also changes the range of the exponent display (see page 6).

1-2 The display



The display shows input data, interim results and answers to calculations. The mantissa section displays up to 10 digits. The exponent section displays up to ± 99 .

- | | |
|----------------------------------|--|
| -E- or -C- | Error indication (see page 9). |
| S | Pressing of SHIFT (see page 12). |
| M | Pressing of MODE (see page 5). |
| M | Something is being stored in the memory (see page 11). |
| K | A constant is being used in calculations (see page 11). |
| hyp | Pressing of hyp (see page 19). |
| LRN | Learn mode (for programming) (see page 29). |
| BASE-N | BASE-N mode (see page 15). |
| $\int dx$ | Integral calculation (see page 36). |
| LR | Regression analysis calculation (see page 25). |
| SD | Standard deviation calculation (see page 23). |
| D or R or G | Angular unit (see page 18). |
| FIX | Decimal places of a displayed value is being designated (see page 21). |
| SCI | Significant digits of a displayed value is being designated (see page 21). |
| P1 | Indicates current program area is P1 (see page 29). |
| P2 | Indicates current program area is P2 (see page 29). |
| ENT | You have just entered variable data into a program or it is time for you to enter variable data (see page 30). |
| 45.12 \div 23. | 45-12/23 (see page 13). |
| 12 \div 3 \div 45.6 | 12 \div 3 \div 45.6" (see page 18). |

■ Exponential Displays

The display can show calculation results only up to 10 digits long. When an intermediate value or a final result is longer, the calculator automatically switches over to exponential notation. Values greater than 9,999,999,999 are always displayed exponentially, while the lower limit is selectable. Note the following:

Type	Lower limit	Upper limit
A (Norm 1)	0.01	9,999,999,999
B (Norm 2)	0.000000001	9,999,999,999

Values less than the lower limits or greater than the upper limit shown above are displayed using exponential format.

Use the following procedure to switch between the Type A lower limit and the Type B lower limit:

- Check the display to see if the FIX or SCI symbols are shown, indicating that the number of significant digits or the number of decimal places have been specified. If either of the symbols is shown, press **MODE** **(9)** to cancel the specification.

- Perform the following calculation:

$$1 \div 200 =$$

- Look at the display to see what the current lower limit is.

If the display reads:

5. ⁰³, the current setting is Type A

If the display reads:

0.005, the current setting is Type B

- Press **MODE** **(9)** to switch between the Type A and Type B lower limits.

*Note that the lower limit is not changed if you press **MODE** **(9)** while the number of significant digits (SCI displayed) and/or the number of decimal places (FIX displayed) are specified. The first time you press **MODE** **(9)**, you clear the FIX and SCI specifications, and so you must press **MODE** **(9)** again to change the lower limit.

2/ORDER OF OPERATIONS AND LEVELS

Operations are performed in the following order of precedence:

- | | | |
|--|------------------|---------------|
| 1. Functions | 4. +, - | } BASE-N mode |
| 2. x^y , $x^{1/y}$, $R \rightarrow P$, $P \rightarrow R$, nPr , nCr | 5. AND | |
| 3. \times , \div | 6. OR, XOR, XNOR | |

Operations with the same precedence are performed from left to right, with operations enclosed in parentheses performed first. If parentheses are nested, the operations enclosed in the innermost set of parentheses are performed first.

*Registers L₁ through L₆ are provided to store operations of lower precedence (including parenthetical operations). Since six registers are provided, calculations up to six levels can be retained.

*Since each level can contain up to three open parentheses, parentheses can be nested up to 18 times.

Ex.) (4 levels, 5 nested parentheses)

Operation:


2 **(** **(** **(** **(** **3** **+** **4** **(** **(** **(** **5** **+** **4** **)** **+** **3** **)** **)** **+** **5** **)** **+** **9** **)** **=**

1 level 1 level 1 level 1 level A

Register contents at point A.


x	4
L ₁	(((5 +
L ₂	4 ×
L ₃	((((3 +
L ₄	2 ×
L ₅	
L ₆	

3/CALCULATION RANGE AND SCIENTIFIC NOTATION



Normal display Scientific notation

When the answer exceeds the normal display capacity, it is automatically shown by scientific notation, 10-digit mantissa and exponents of 10 up to ± 99 .



- The minus (-) sign for mantissa

- The mantissa

- The minus (-) sign for exponent

- The exponent of ten

The whole display is read: $-1.234567891 \times 10^{-99}$

*Entry can be made in scientific notation by using the **EXP** key after entering the mantissa.

EXAMPLE	OPERATION	READ-OUT
---------	-----------	----------

$-1.234567891 \times 10^{-3}$ (= -0.001234567891)

1	((((234567891 EXP	- 1.234567891
	EXP	- 1.234567891 00
3	EXP	- 1.234567891 -03

4/CORRECTIONS

If you notice an input mistake before you press the arithmetic operation key, simply press **C** to clear the value and enter it again.

In a series of calculations, you can correct errors in intermediate results by recalculating correctly when the error appears and then continuing with the original series from where you interrupted it.

If you make a mistake by pressing the wrong key when entering **+**, **-**, **x**, **÷**, **1/x** or **(SHIFT) 1/x**, simply press the appropriate key to correct. In this case, the most recently pressed key operation is used, but it retains the order of precedence of the original operation entered.

5/OVERFLOW OR ERROR CHECK

Overflow or error is indicated by the “-E-” or “-C -” sign and stops further calculation. **Overflow or error occurs:**

- When an answer, whether intermediate or final, or accumulated total in the memory is more than 1×10^{100} (“-E-” sign appears).
- When function calculations are performed with a number exceeding the input range (“-E-” sign appears).
- When the ranges for any of the number systems used in the BASE-N mode are exceeded. (“-E-” sign appears).
- When unreasonable operations are performed in statistical calculations (“-E-” sign appears).
- When the total number of levels of explicit and/or implicit (with addition-subtraction versus multiplication-division including x^y and $x^{1/y}$) nested parentheses exceeds 6, or more than 18 pairs of parentheses are used (“-C -” sign appears).
Ex.) You have pressed the **()** key 18 times continuously before designating the sequence of **(2) + (3) x**.

To release these overflow checks:

- b), c), d)..... Press the **AC** key.
- e)..... Press the **AC** key. Or press the **C** key, and the intermediate result just before the overflow occurs is displayed and the subsequent calculation is possible.

Memory protection:

The content of the memory is protected against overflow or error and the accumulated total is recalled by pressing the **MR** key after the overflow check is released by the **AC** key.

6/POWER SOURCE

The CASIO C-POWER system makes it possible to operate calculators any place even in complete darkness; you don't have to worry about the light conditions.

*This unit protects memory no matter what the light conditions.

*This unit uses two power sources: an amorphous silicon solar cell, and a lithium battery (GR927).

*A weakened lithium battery is indicated when the memory contents spontaneously clear or when the display darkens under poor light conditions and cannot be restored by pressing the **(ON)** key. Anytime such symptoms occur, the unit should be taken to your retailer or nearby dealer for battery replacement.

*Lithium battery replacement should only be performed by your retailer or an authorized dealer.

*To ensure proper operation the lithium battery should be replaced once every six years no matter how much the unit is used.

Auto power-off function

This unit automatically switches OFF if not operated for approximately 6 minutes. Power can be restored by pressing the **(ON)** key. Memory contents and mode setting are retained even when power is switched off.

7/NORMAL CALCULATIONS

*You can perform normal calculations in the RUN mode (**(MODE) 1**).

*Calculations can be performed in the same sequence as the written formula (true algebraic logic).

*Nesting of up to 18 parentheses at 6 levels is allowed.

7-1 Four basic calculations (incl. parenthesis calculations)

EXAMPLE	OPERATION	READ-OUT
$23 + 4.5 - 53 =$	23 + 4.5 = 53 =	- 25.5
$56 \times (-12) \div (-2.5) =$	56 x 12 = 2 = 5 =	268.8
$2 \div 3 \times (1 \times 10^{20}) =$	2 = 3 x 1 = 20 =	6.666666667 19
$7 \times 8 - 4 \times 5 (= 56 - 20) =$	7 x 8 = 4 x 5 =	36.
$1 + 2 - 3 \times 4 \div 5 + 6 =$	1 + 2 = 3 x 4 = 5 = 6 =	6.6
$\frac{6}{4 \times 5} =$	4 x 5 = 6 = (SHIFT) 1/x =	0.3
*The number of levels of the () key can be displayed.		
$2 \times \{ 7 + 6 \times (5 + 4) \} =$	2 x (= 7 + 6 x (=	01 0.
	5 + 4 = 6 x (=	02 0.
	2 x (=	122.

*It is unnecessary to press the **()** key before the **=** key.

$10 - \{ 7 \times (3 + 6) \} =$ **10 = 7 x (= 3 + 6 =** **- 53.**

Another operation: **10 = 7 x (= 3 + 6 =**

- 10 -

7-2 Constant calculations

*The "K" sign appears when a number is set as a constant.

$$3 + 2.3 =$$

$$6 + 2.3 =$$

$$2.3 \times 12 =$$

$$(-9) \times 12 =$$

$$17 + 17 + 17 + 17 =$$

$$1.7^2 =$$

$$1.7^3 =$$

$$1.7^4 =$$

$$3 \times 6 \times 4 =$$

$$3 \times 6 \times (-5) =$$

$$\frac{56}{4 \times (2 + 3)} =$$

$$\frac{23}{4 \times (2 + 3)} =$$

$$2 \div 3 \div 3 =$$

$$6 \div 3 =$$

$$12 \times 2 \div 3 =$$

$$9 \div 2 =$$

$$17 \div 2 =$$

$$\div =$$

$$\div =$$

$$1 \div 7 \times \times =$$

$$\div =$$

$$\div =$$

$$3 \times 6 \times \times =$$

$$4 \div =$$

$$5 \div 2 =$$

$$4 \times (2 + 3) \div 3 =$$

$$56 \div =$$

$$23 \div =$$

7-3 Memory calculations using the independent memory

*When a new number is entered into the independent memory by the **SHIFT** **Min** key, the previous number stored is automatically cleared and the new number is put in the independent memory.

*The "M" sign appears when a number is stored in the independent memory.

*The contents accumulated into the independent memory are preserved even after the power switch is turned off.

To clear the contents press **0** **SHIFT** **Min** or **AC** **SHIFT** **Min** in sequence.

$$\begin{array}{r} 53 + 6 = 59 \\ 23 - 8 = 15 \\ 56 \times 2 = 112 \\ +) 99 \div 4 = 24.75 \\ \hline 210.75 \end{array}$$

$$\begin{array}{r} 53 \div 6 \div \text{SHIFT} \text{Min} \text{ M } 59. \\ 23 \div 8 \text{ M+ } \text{M } 15. \\ 56 \times 2 \text{ M+ } \text{M } 112. \\ 99 \div 4 \text{ M+ } \text{M } 24.75 \\ \text{MR} \text{ M } 210.75 \end{array}$$

$$7 + 7 - 7 + (2 \times 3) + (2 \times 3) + (2 \times 3) - (2 \times 3) =$$

$$7 \text{ SHIFT Min M+ SHIFT M- } 2 \times 3 \text{ M+ M+ SHIFT M- MR } \text{M } 19.$$

$$\begin{array}{r} 12 \times 3 = 36 \\ -) 45 \times 3 = 135 \\ \hline 78 \times 3 = 234 \\ \hline 135 \end{array}$$

$$\begin{array}{r} 3 \times \times 12 \div \text{SHIFT} \text{Min} \text{ M K } 36. \\ 45 \text{ SHIFT M- } \text{M K } 135. \\ 78 \text{ M+ } \text{M K } 234. \\ \text{MR} \text{ M K } 135. \end{array}$$

7-4 Memory calculations using 6 constant memories

*When a new number is entered into a constant memory by operating **ENTRY** **K.in** (**1** to **6**), the previous number stored is automatically cleared and the new number is put in the constant memory.

*The contents stored in the constant memories are preserved even after the power switch is turned off.

To clear the contents press **0** **K.in** **1** (to **6**) or **AC** **K.in** **1** (to **6**) in sequence.

$$193.2 \div 23 =$$

$$193 \div 2 \text{ K.in } 1 \div 23 \div \text{K.out } 1 \text{ } 8.4$$

$$193.2 \div 28 =$$

$$\text{K.out } 1 \div 28 \div \text{K.out } 1 \text{ } 6.9$$

$$193.2 \div 42 =$$

$$\text{K.out } 1 \div 42 \div \text{K.out } 1 \text{ } 4.6$$

*Another operations by using the independent memory:

$$193 \div 2 \text{ SHIFT Min } \div 23 \div \text{MR} \div 28 \div \text{MR} \div 42 \div$$

$$\frac{9 \times 6 + 3}{(7 - 2) \times 8} =$$

$$\begin{array}{r} 9 \times 6 \div 3 \div \text{K.in } 1 \text{ } 57. \\ \text{K.in } 7 \div 2 \div \text{K.in } 8 \div \text{K.in } 2 \text{ } 40. \\ \text{K.out } 1 \div \text{K.out } 2 \div \text{K.out } 2 \text{ } 1.425 \end{array}$$

*Calculations in constant memory registers can also be performed by using the **+**, **-**, **x** and **÷** keys.

$$\begin{array}{r} 7 \times 8 \times 9 = 504 \\ 4 \times 5 \times 6 = 120 \\ 3 \times 6 \times 9 = 162 \end{array}$$

$$\text{(Total) } 14 \ 19 \ 24 \ 786$$

$$7 \text{ K.in } 1 \times 8 \text{ K.in } 2 \times 9 \text{ K.in } 3 \div \text{SHIFT} \text{Min} \text{ M } 504.$$

$$4 \text{ K.in } 1 \times 5 \text{ K.in } 2 \times 6 \text{ K.in } 3 \text{ M+ } \text{M } 120.$$

- 14 -

*600 grams was added to 1200 grams. What percent is the total to the initial weight?
 *510 grams was added to 1200 grams. What percent is the total to the initial weight?

1200 + 600 = 150.
 510 \% 1200 = 142.5

*How many percent down is 138 grams to 150 grams?
 *How many percent down is 129 grams to 150 grams?

150 - 138 = -8.
 129 \% 150 = -14.

8/BINARY/OCTAL/DECIMAL/HEXADECIMAL CALCULATIONS

•Binary/octal/decimal/hexadecimal calculations and conversions are performed in the BASE-N mode (MODE [O]).

•Base values are set by pressing one of the following keys:

KEY	BASE
[DEC]	Decimal
[HEX]	Hexadecimal
[SHIFT][BIN]	Binary
[SHIFT][OCT]	Octal

•Calculation range

BASE	DIGITS	RANGE
Binary	10 digits	Positive : $0 \leq x \leq 111111111$ Negative: $1000000000 \leq x \leq 1111111111$
Octal	10 digits	Positive : $0 \leq x \leq 377777777$ Negative: $4000000000 \leq x \leq 7777777777$
Decimal	10 digits	Positive : $0 \leq x \leq 2147483647$ Negative: $-2147483648 \leq x < 0$
Hexadecimal	8 digits	Positive : $0 \leq x \leq 7FFFFFFF$ Negative: $80000000 \leq x \leq FFFFFFFF$

•Valid values

BASE	VALUES
Binary:	0, 1
Octal:	0, 1, 2, 3, 4, 5, 6, 7
Decimal:	0, 1, 2, 3, 4, 5, 6, 7, 8, 9
Hexadecimal:	0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F

*Values other than noted above cannot be entered while each respective base is in effect. The letters B and D are displayed in lower case for hexadecimal.

*You cannot specify the unit of angular measurement (degrees, radians, grads) or the display format (FIX, SCI) while the calculator is in the BASE-N mode. Such specifications can only be made if you first exit the BASE-N mode.

8-1 Binary/octal/decimal/hexadecimal conversions

MODE [O] (BASE-N mode)

Conversion of 22_{10} to binary DEC 22 [SHIFT][BIN] 10110. ^b

Conversion of 22_{10} to octal [SHIFT][OCT] 26. ^o

Conversion of 22_{10} to hexadecimal [HEX] 16. ^h

Conversion of 513_{10} to binary DEC 513 [SHIFT][BIN] -E-. ^b

*Conversion may sometimes be impossible if calculation range of original value is greater than range of result value.

Conversion of $7FFFFFFF_{16}$ to decimal $\text{[HEX] 7FFFFFFF [DEC]}$ 2147483647. ^d

Conversion of 4000000000_8 to decimal $\text{[SHIFT][OCT] 4000000000 [DEC]}$ -536870912. ^d

Conversion of 123456_{10} to octal DEC 123456 [SHIFT][OCT] 361100. ^o

Conversion of 1100110_2 to decimal $\text{[SHIFT][BIN] 1100110 [DEC]}$ 102. ^d

8-2 Negative expressions

•Negative values can be obtained by pressing the NEG key. The two's complement is produced for negation of binary, octal, decimal and hexadecimal values.

MODE [O] (BASE-N mode)

Negation of 1010_2 $\text{[SHIFT][BIN] 1010 [NEG]}$ 1111110110. ^b

Conversion to decimal DEC -10. ^d

Negation of 1_2 $\text{[SHIFT][BIN] 1 [NEG]}$ 111111111. ^b

Negation of 2_8 $\text{[SHIFT][OCT] 2 [NEG]}$ 777777776. ^o

Negation of 34_{16} [HEX] 34 [NEG] FFFFFFFC. ^h

8-3 Binary/octal/decimal/hexadecimal calculations

•Memory and parenthesis calculations can be used with binary, octal, decimal and hexadecimal number systems.

MODE [O] (BASE-N mode)

$10111_2 + 11010_2 = 110001_2$ $\text{[SHIFT][BIN] 10111 [+ 11010]}$ 110001. ^b

$123_8 \times ABC_{16} = 37AF4_{16}$
 $= 228084_{10}$ $\text{[SHIFT][OCT] 123 [X] [HEX] ABC [DEC]}$ 37AF4. ^h
 228084. ^d

$$1F2D_{16} - 100_{10} = 7881_{10}$$

$$= 1EC9_{16}$$

HEX	1F2D	DEC	100	7881.
HEX		DEC		1EC9.

$$7654_8 \div 12_{10} = 334.3\cdots_{10}$$

$$= 516_8$$

SHIFT	DEC	7654	DEC	12	334.
SHIFT	DEC				516.

*Fractional parts of calculation results are truncated.

$$110_2 + 456_8 \times 78_{10} \div 1A_{16} = 390_{16}$$

$$= 912_{10}$$

SHIFT	BIN	110	+	SHIFT	DEC	456	x	DEC	78	=	HEX	1A	390.
													912.

*Multiplication and division are given priority over addition and subtraction in mixed calculations.

$$BC_{16} \times (14_{10} + 69_{10}) = 15604_{10}$$

$$= 3CF4_{16}$$

HEX	BC	x	(14	+	69)	=	15604.
HEX									3CF4.

$$23_8 + 963_{10} = 982_{10}$$

SHIFT	DEC	23	+	963	=	M	982.
-------	-----	----	---	-----	---	---	------

$$23_8 + 101011_2 = 111110_2$$

MR	+	SHIFT	BIN	101011	=	M	111110.
----	---	-------	-----	--------	---	---	---------

$$2A56_{16} \times 23_8 = 32462_{16}$$

HEX	2A56	x	MR	23	=	M	32462.
-----	------	---	----	----	---	---	--------

8-4 Logical operations

•The **AND**, **OR**, **XOR**, **XNOR** and **NOT** keys can be used to perform the respective binary, octal, decimal and hexadecimal logical operations.

MODE **[Q]** (BASE-N mode)

$$19_{16} \text{ AND } 1A_{16} = 18_{16}$$

HEX	19	AND	1A	=	18.
-----	----	-----	----	---	-----

$$1110_2 \text{ AND } 36_8 = 1110_2$$

SHIFT	BIN	1110	AND	SHIFT	DEC	36	=	16.
								1110.

$$23_8 \text{ OR } 61_8 = 63_8$$

SHIFT	DEC	23	OR	61	=	63.
-------	-----	----	----	----	---	-----

$$120_{16} \text{ OR } 1101_2 = 12D_{16}$$

HEX	120	OR	SHIFT	BIN	1101	=	100101101.
HEX							12D.

$$5_{16} \text{ XOR } 3_{16} = 6_{16}$$

HEX	5	XOR	3	=	6.
-----	---	-----	---	---	----

$$2A_{16} \text{ XNOR } 5D_{16} = FFFFFFF8_{16}$$

HEX	2A	XNOR	5D	=	FFFFFFF8.
-----	----	------	----	---	-----------

$$1010_2 \text{ AND } (A_{16} \text{ OR } 7_{16}) = 1010_2$$

SHIFT	BIN	1010	AND	(HEX	A	OR	7)	=	A.
											1010.

$$1A_{16} \text{ AND } 2F_{16} = A_{16}$$

HEX	2F	AND	1A	=	A.
-----	----	-----	----	---	----

$$3B_{16} \text{ AND } 2F_{16} = 2B_{16}$$

HEX	3B	AND	2F	=	2B.
-----	----	-----	----	---	-----

$$\text{NOT of } 10110_2$$

SHIFT	BIN	10110	NOT	=	1111101001.
-------	-----	-------	-----	---	-------------

$$\text{NOT of } 1234_8$$

SHIFT	DEC	1234	NOT	=	7777776543.
-------	-----	------	-----	---	-------------

$$\text{NOT of } 2FFFD_{16}$$

HEX	2FFFD	NOT	=	FFd00012.
-----	-------	-----	---	-----------

9/FUNCTION CALCULATIONS

Scientific function keys can be utilized as subroutines of four basic calculations (including parenthesis calculations).

- *This calculator computes as $\pi = 3.141592654$ and $e = 2.718281828$.
- *In some scientific functions, the display disappears momentarily while complicated formulas are being processed. So do not enter numerals or press the function key until the previous answer is displayed.
- *You cannot specify the unit of angular measurement (degrees, radians, grads) or the display format (FIX, SCI) while the calculator is in the BASE-N mode. Such specifications can only be made if you first exit the BASE-N mode.
- *For each input range of the scientific functions, see page 39.

9-1 Sexagesimal \leftrightarrow Decimal conversion

The **[DMS]** key converts the sexagesimal figure (degree, minute and second) to decimal notation. Operation of **[SHIFT]** **[DMS]** converts the decimal notation to the sexagesimal notation.

$$14^\circ 25' 36'' =$$

14	[DMS]	14.
25	[DMS]	14.41666667
36	[DMS]	14.42666667
	[SHIFT] [DMS]	14° 25' 36.

9-2 Trigonometric/Inverse trigonometric functions

$$\sin\left(\frac{\pi}{6}\right) \text{ rad} =$$

"	[PI]	"	(MODE	[5])	[7]	[SIN]	0.5
---	------	---	---	------	-----	---	-----	-------	-----

$$\cos 63^\circ 52' 41'' =$$

"	[D]	"	(MODE	[4])	63	[DMS]	52	[DMS]	41	[DMS]	63.87805556
												[COS]	0.440283084

$$\tan(-35 \text{ gra}) =$$

"	[G]	"	(MODE	[6])	35	[DMS]	-	[TAN]	-0.612800788
---	-----	---	---	------	-----	---	----	-------	---	-------	--------------

$$2 \cdot \sin 45^\circ \times \cos 65^\circ =$$

$$\cot 30^\circ = \frac{1}{\tan 30^\circ} =$$

$$\sec\left(\frac{\pi}{3} \text{ rad}\right) = \frac{1}{\cos\left(\frac{\pi}{3} \text{ rad}\right)} =$$

$$\operatorname{cosec} 30^\circ = \frac{1}{\sin 30^\circ} =$$

$$\cos^{-1} \frac{\sqrt{2}}{2} =$$

$$\tan^{-1} 0.6104 =$$

9-3 Hyperbolic functions and inverse hyperbolic functions

$$\sinh 3.6 =$$

$$\tanh 2.5 =$$

$$\cosh 1.5 - \sinh 1.5 =$$

$$\sinh^{-1} 30 =$$

Solve $\tanh 4x = 0.88$.

$$x = \frac{\tanh^{-1} 0.88}{4} =$$

9-4 Common & Natural logarithms/Exponentiations (Common antilogarithms, Natural antilogarithms, Powers and Roots)

$$\log 1.23 (= \log_{10} 1.23) =$$

Solve $4^x = 64$.

$$x \cdot \log 4 = \log 64$$

$$x = \frac{\log 64}{\log 4}$$

$$\ln 90 (= \log_e 90) =$$

$$\log 456 \div \ln 456 =$$

$$10^{0.4} + 5 \cdot e^{-3} =$$

$$5.6^{2.3} =$$

$$123^{1/7} (= \sqrt[7]{123}) =$$

$$(78 - 23)^{-12} =$$

$$3^{12} + e^{10} =$$

$$\log \sin 40^\circ + \log \cos 35^\circ =$$

(The antilogarithm..... 0.526540784)

$$15^{1/5} + 25^{1/6} + 35^{1/7} =$$

9-5 Square roots, Cube roots, Squares, Reciprocals & Factorials

$$\sqrt{2} + \sqrt{3} \times \sqrt{5} =$$

$$\sqrt[3]{5} + \sqrt[3]{-27} =$$

$$123 + 30^2 =$$

$$\frac{1}{\frac{1}{3} - \frac{1}{4}} =$$

$$8! (= 1 \times 2 \times 3 \times \dots \times 7 \times 8) =$$

9-6 Miscellaneous functions (FIX, SCI, NORM, RND, RAN #, ENG)

$$1.234 + 1.234 =$$

"FIX2" (MODE) (7) (2) 1 234	FIX	1.23
1 234	FIX	2.47
(MODE) (9)		2.468

"FIX2" 1 234 (SHIFT) (RND) +	FIX	1.23
1 234 (SHIFT) (RND) =	FIX	2.46
(MODE) (9)		2.46

$$1 \div 3 + 1 \div 3 =$$

"SCI2" (MODE) (8) (2) 1 3	SCI	3.3 - 01
1 3	SCI	6.7 - 01
(MODE) (9)		0.66666666

"SCI2" (1) 1 3 (SHIFT) (RND) +	SCI	3.3 - 01
(1) 1 3 (SHIFT) (RND) =	SCI	6.6 - 01
(MODE) (9)		0.66

$$1 \div 1000 = 0.001$$

$$= 1 \times 10^{-3}$$

(Norm 1) 1 1000		1. - 03
(Norm 2) (MODE) (9)		0.001

$$123\text{m} \times 456 = 56088\text{m}$$

$$= 56.088\text{km}$$

123 456		56088.
(ENG)		56.088 03

$$7.8\text{g} \div 96 = 0.08125\text{g}$$

$$= 81.25\text{mg}$$

7 8 96		0.08125
(ENG)		81.25 - 03

Generate a random number between 0.000 and 0.999.


(SHIFT) (RAN#)		0.570
----------------	--	-------

(Example)

9-7 Polar to rectangular co-ordinates conversion

Formula: $x = r \cdot \cos \theta$ $y = r \cdot \sin \theta$

Ex.) Find the value of x and y when the point P is shown as $\theta = 60^\circ$ and length $r = 2$ in the polar co-ordinates.

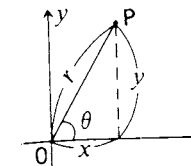


"D" 2 (SHIFT) (P-R) 60		1.
(x)		
(SHIFT) (X-Y)		1.732050808
(y)		

9-8 Rectangular to polar co-ordinates conversion

Formula: $r = \sqrt{x^2 + y^2}$

$$\theta = \tan^{-1} \frac{y}{x} \quad (-180^\circ < \theta \leq 180^\circ)$$

Ex.) Find the length r and angle θ in radian when the point P is shown as $x = 1$ and $y = \sqrt{3}$ in the rectangular coordinates.

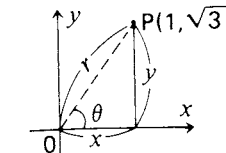

"R" 1 (SHIFT) (R-P) 3		2.
(r)		
(SHIFT) (X-Y)		1.047197551
(theta in radian)		

9-9 Permutations

Input range: $n \geq r$ (n, r : natural numbers)

Formula: $nPr = \frac{n!}{(n-r)!}$

Ex.) How many numbers of 4 figures can be obtained when permuting 4 different numbers among 7 (1 to 7)?

7 (SHIFT) (nPr) 4		840.
-------------------	--	------

9-10 Combinations

Input range: $n \geq r$ (n, r : natural numbers)

Formula: $nCr = \frac{n!}{r!(n-r)!}$

Ex.) How many groups of 4 members can be obtained when there are ten in class.

10 (SHIFT) (nC) 4		210.
-------------------	--	------

10/STATISTICAL CALCULATIONS

*Be sure to press **[SHIFT] [AC]** in sequence prior to starting a statistical calculation.

10-1 Standard deviation

*Set the function mode to "SD" by pressing **[MODE] [3]**.

Ex.) Find σ_{n-1} , σ_n , \bar{x} , n , Σx and Σx^2 based on the data 55, 54, 51, 55, 53, 53, 54, 52.

"SD" **[SHIFT] [AC]** **55** **[DATA]** **54** **[DATA]** **51** **[DATA]** **55** **[DATA]** **53** **[DATA]** **54** **[DATA]** **52** **[DATA]** **[=]** **52.**

(Sample standard deviation) **[SHIFT] [xσn-1]** **1.407885953**

(Population standard deviation) **[SHIFT] [xσn]** **1.316956719**

(Arithmetical mean) **[SHIFT] [x̄]** **53.375**

(Number of data) **[KOUT] [n]** **8.**

(Sum of value) **[KOUT] [Σx]** **427.**

(Sum of square value) **[KOUT] [Σx²]** **22805.**

Calculate the unbiased variance and the deviation between each data item and the average.

(Subsequently) **[SHIFT] [xσn] [SHIFT] [x²]** **1.982142857**

(Unbiased variance)

[SHIFT] [x̄] **[=]** **55** **[=]** **1.625**

(55 - \bar{x})

54 **[=]** **0.625**

(54 - \bar{x})

51 **[=]** **-2.375**

(51 - \bar{x})

⋮
⋮
⋮

Note: The sample standard deviation σ_{n-1} is defined as

$$\sqrt{\frac{\Sigma x^2 - \frac{(\Sigma x)^2}{n}}{n-1}}$$

the population standard deviation σ_n is defined as

$$\sqrt{\frac{\Sigma x^2 - \frac{(\Sigma x)^2}{n}}{n}}$$

and the arithmetical mean \bar{x} is defined as

$$\frac{\Sigma x}{n}$$

*Pressing **[xσn]**, **[xσn]**, **[x̄]**, **[n]**, **[Σx]** or **[Σx²]** key need not be done sequentially.

Ex.) Find n , \bar{x} & σ_{n-1} based on the data: 1.2, -0.9, -1.5, 2.7, -0.6, 0.5, 0.5, 0.5, 0.5, 1.3, 1.3, 1.3, 0.8, 0.8, 0.8, 0.8, 0.8.

"SD" **[SHIFT] [AC]** **1** **[+]** **2** **[DATA]** **[-]** **9** **[%] [DATA]** **[-]** **0.9**

1 (Mistake) **2** **[+]** **5** **[%] [DATA]** **[-]** **2.5**

1 (To correct) **[C]** **0.**

1 **[+]** **5** **[%] [DATA]** **[-]** **1.5**

2 **[+]** **7** **[DATA]** **2.7**

[DATA] **2.7**

2 (Mistake) **1** **[+]** **6** **[%] [DATA]** **[-]** **1.6**

3 (Mistake) **[SHIFT] [DEL]** **[-]** **1.6**

3 (To correct) **[+]** **6** **[%] [DATA]** **[-]** **0.6**

2 (To correct) **2** **[+]** **7** **[SHIFT] [DEL]** **2.7**

[-] **5** **[%]** **0.5**

4 **[DATA]** **0.5**

4 (Mistake) **1** **[+]** **4** **[%]** **1.4**

4 (To correct) **[AC]** **0.**

1 **[+]** **3** **[%] [DATA]** **1.3**

[-] **8** **[%]** **0.8**

5 (Mistake) **6** **[DATA]** **0.8**

⑤ (To correct)

8 5 6	SHIFT DEL	0.8
8 5 5	DATA	0.8
K OUT	17	
SHIFT 2	0.635294117	
SHIFT X <=> Y	0.95390066	

10-2 Regression analysis

*Set the function mode to "LR" by pressing **MODE** **2**.

■ Linear regression

Formula: $y = A + Bx$

$$A = \frac{\Sigma y - B \cdot \Sigma x}{n} \quad B = \frac{n \cdot \Sigma xy - \Sigma x \cdot \Sigma y}{n \cdot \Sigma x^2 - (\Sigma x)^2}$$

$$r = \frac{n \cdot \Sigma xy - \Sigma x \cdot \Sigma y}{\sqrt{[n \cdot \Sigma x^2 - (\Sigma x)^2] [n \cdot \Sigma y^2 - (\Sigma y)^2]}}$$

Ex.) Results from measuring the length and temperature of a steel bar.

temp.	length
10°C	1003mm
15	1005
20	1010
25	1008
30	1014

Find the constant term (A), regression coefficient (B), correlation coefficient (r) and estimated values (\hat{x} , \hat{y}) using the above figures as a basis.

"LR"

SHIFT KAC 10	10.
1003	DATA 1003.
15	DATA 1005.
20	DATA 1010.
25	DATA 1008.
30	DATA 1014.
SHIFT A	998.
SHIFT B	0.5
SHIFT r	0.919018277

(r)

(When the temp. is 18°C) 18 **2** 1007.
(mm)

(When the length is 1000mm) 1000 **SHIFT 2** 4.
(°C)

Note: Σx^2 , Σx , n , Σy^2 , Σy , Σxy , \bar{x} , $x\sigma_{n-1}$, \bar{y} , $y\sigma_{n-1}$, A, B and r are respectively obtained by pressing a numeral key (**1** to **9**) after the **K OUT** or **SHIFT** key.

*Correction of data entry

xi	2	3	2	3	2	4
yi	3	4	4	5	5	5

"LR"

① (Mistake)

① (To correct)

② (Mistake)

② (To correct)

③ (Mistake)

③ (To correct)

④ (Mistake)

⑤ (Mistake)

⑤ (To correct)

④ (To correct)

SHIFT KAC 2 3	DATA 3.
4	DATA 4.
C	0.
3	DATA 3.
4	DATA 4.
3	DATA 3.
2	DATA 2.
4	DATA 4.
1	DATA 1.
5	DATA 5.
SHIFT DEL	5.
3	DATA 5.
2	DATA 2.
4	DATA 4.
4	DATA 4.
6	DATA 6.
SHIFT DEL	6.
4	DATA 5.
2	DATA 4.
4	DATA 4.
2	DATA 5.

These ways of correction can also be applied to logarithmic, exponential or power regression.

■ Logarithmic regression

Formula: $y = A + B \cdot \ln x$

*Input data items are the logarithm of $x (\ln x)$, and y which is the same as in linear regression.
 *Operation for calculating and correcting regression coefficients are basically the same as in linear regression. Operate the sequence $x \ln \square \square$ to obtain estimator \hat{y} and $y \square \square \square \square$ for estimator \hat{x} . Note that $\Sigma \ln x$, $\Sigma (\ln x)^2$, and $\Sigma \ln x \cdot y$ are obtained instead of Σx , Σx^2 , and Σxy respectively.

Ex.)

x_i	29	50	74	103	118
y_i	1.6	23.5	38.0	46.4	48.9

Find A, B, r, \hat{x} and \hat{y} using the above figures as a basis.

“LR”

SHIFT	MAC	29	ln	□	3.36729583
1	□	6	DATA		1.6
50	ln	□	23.5	5	DATA
74	ln	□	38	4	DATA
103	ln	□	46	4	DATA
118	ln	□	48	9	DATA
SHIFT	A				-111.1283963

(A)

SHIFT	B				34.02014719
-------	---	--	--	--	-------------

(B)

SHIFT	r				0.994013942
-------	---	--	--	--	-------------

(r)

(When x_i is 80)	80	ln	□	37.9487947
--------------------	----	----	---	------------

(\hat{y})

(When y_i is 73)	73	SHIFT	□	SHIFT	□	224.1541338
--------------------	----	-------	---	-------	---	-------------

(\hat{x})

■ Exponential regression

Formula: $y = A \cdot e^{B \cdot x}$

*Input data items are the logarithm of $y (\ln y)$, and x which is the same as in linear regression.
 *Operation for correction is basically the same as in linear regression. Operate $\square \square \square \square$ for estimator \hat{y} , and $y \square \square \square \square$ for estimator \hat{x} . Note that $\Sigma \ln y$, $\Sigma (\ln y)^2$, and $\Sigma x \cdot \ln y$ are obtained instead of Σy , Σy^2 , and Σxy .

Ex.)

x_i	6.9	12.9	19.8	26.7	35.1
y_i	21.4	15.7	12.1	8.5	5.2

Find A, B, r, \hat{x} and \hat{y} using the above figures as a basis.

“LR”

SHIFT	MAC	6	□	9	□	6.9
21	□	4	ln	DATA		3.063390922
12	□	9	□	15	□	7
19	□	8	□	12	□	1
26	□	7	□	8	□	5
35	□	1	□	5	□	2
SHIFT	A	SHIFT	□			30.49758743

(A)

SHIFT	B				-0.049203708
-------	---	--	--	--	--------------

(B)

SHIFT	r				-0.997247351
-------	---	--	--	--	--------------

(r)

(When x_i is 16)	16	□	SHIFT	□	13.87915739
--------------------	----	---	-------	---	-------------

(\hat{y})

(When y_i is 20)	20	ln	SHIFT	□	8.574868054
--------------------	----	----	-------	---	-------------

(\hat{x})

■ Power regression

Formula: $y = A \cdot x^B$

*Input data items are $\ln x$ and $\ln y$.
 *Operation for correction is basically the same as in linear regression. Operate $\square \square \square \square$ for estimator \hat{y} , and $y \square \square \square \square$ for estimator \hat{x} . Note that $\Sigma \ln x$, $\Sigma (\ln x)^2$, $\Sigma \ln y$, $\Sigma (\ln y)^2$, and $\Sigma \ln x \cdot \ln y$ are obtained instead of Σx , Σx^2 , Σy , Σy^2 and Σxy respectively.

Ex.)

x_i	28	30	33	35	38
y_i	2410	3033	3895	4491	5717

Find A, B, r, \hat{x} and \hat{y} using the above figures as a basis.

“LR”

SHIFT	MAC	28	ln	□	3.33220451
2410	ln	□			7.787382026
30	ln	□	3033	ln	DATA
33	ln	□	3895	ln	DATA
35	ln	□	4491	ln	DATA
38	ln	□	5717	ln	DATA
SHIFT	A	SHIFT	□		0.238801299

(A)

SHIFT B 2.771865947

(B)

SHIFT T 0.998906243

(T)

(When xi is 40) 40 (ln) (x) (SHIFT) (x²) 6587.67572

(y)

(When yi is 1000) 1000 (ln) (SHIFT) (x) (SHIFT) (x²) 20.2622555

(x)

11/PROGRAMMED CALCULATIONS

*This calculator has a program memory of 38 steps. Up to two programmed procedures of calculation may be stored in the memory.


*To store a program (mathematical procedure) in the calculator, execute ordinary (i.e. manual) calculation in the LRN mode (press (MODE) (EXP) only once).

*Now the calculator has memorized the program. Input data and press the (RUN) key, and the calculator executes the program with the data. This is very convenient for repeating calculations with varying sets of data.

How to store and execute programs

Ex. 1) Calculate the surface areas (S) of regular octahedrons whose ridges are respectively 10, 7 and 15 cm long.

Formula: $S = 2\sqrt{3} a^2$

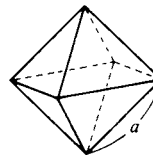

Ridge length (a)	Surface area
10 cm	(346.41) cm ²
7	(169.74)
15	(779.42)

*Values enclosed with parentheses are to be obtained.

•The following sequence of key operations realizes a mathematical procedure of the above formula.

2 X 3 (✓) 10 (SHIFT) (x²) (=) → S

↑
Value of a (data)

•Operate the above sequence in the LRN mode ((MODE) (EXP)). Note that (ENT) must be pressed prior to data entry (the value of a in this case).

(Select LRN mode)

MODE EXP LRN P1 P2 0.

LRN and P1, P2 lit.

(Designate program No.)

P1 LRN P1 0.

Select a program area P1 or P2.

2	LRN	P1	2.
X	LRN	P1	2.
3	LRN	P1	3.
✓	LRN	P1	1.732050808
X	LRN	P1	3.464101615
ENT	LRN	P1	10. 00
SHIFT	LRN	P1	100.
=	LRN	P1	346.4101615

S for a = 10

(Input data)

*The mathematical procedure is stored in P1.

Execution of the program stored

(Select RUN mode)

MODE (LRN disappears) 346.4101615

(Designate program No.)

P1 3.464101615 (X) 7 (RUN) 169.7409791

S for a = 7


P1 15 (RUN) 779.4228634

S for a = 15

Ex. 2) Calculate the length, ℓ of the arc and the length, a of the chord of a sector with radius and radii making an angle of θ°

$$\ell = \frac{\pi r \theta}{180}$$

$$a = 2r \sin \frac{\theta}{2}$$

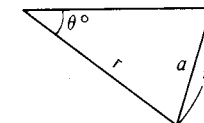

Radius (r)	Angle of radii (θ)	Arc length (ℓ)	Chord length (a)
10 cm	60°	(10.47) cm	(10) cm
12	42°34'	(8.91)	(8.71)
15	36°	(9.42)	(9.27)

*The values enclosed with parentheses are to be obtained.

(Select LRN mode)

LRN P1 P2
0.

(Designate program No.)

P2 LRN P2
0.
MODE 4 ENT 10 LRN P2
10.

r → To K1 register

Kin 1 X ENT 60 LRN P2
60.

θ → To K2 register

Kin 2 X π 180 = SHIFT HLT LRN P2
10.47197551

HLT for displaying result (ℓ)

2 Kin X 1 Kout 2 K1 × 2, K2 ÷ 2

Kout 2 sin Kin X 1 $\sin \frac{\theta}{2} \times K1$

Kout 1 LRN P2
10.

Result (a)

Execution of the program stored.

(Select RUN mode)

(LRN disappears)
MODE 10.

(Designate program No.)

P2 10. ENT

(Input r)

12 RUN 12. AS

(Input θ)

42 34 RUN 8.915141819

Result (ℓ)

(Subsequently)

RUN 8.711524731

Result (a)

P2 15 RUN 36 RUN 9.424777961

Result (ℓ)

(Subsequently)

RUN 9.270509831

Result (a)

■ Program step

•The program is stored (written) in the calculator as shown below.

No. of steps	Program	No. of steps	Program
1	P1 2	15	x
2	x	16	π
3	3	17	÷
4	$\sqrt{}$	18	1
5	x	19	8
6	ENT	20	0
7	SHIFT x^2	21	=
8	=	22	SHIFT HLT
9	P2 MODE 4	23	2
10	ENT	24	Kin × 1
11	Kin 1	25	Kin ÷ 2
12	x	26	Kout 2
13	ENT	27	sin
14	Kin 2	28	Kin × 1
		29	Kout 1

•The program capacity is 38 steps. The program may be divided into two areas (P1 and P2) and each can be used independently of the other.

•An error results ("E" displayed) when there is an attempt to write the 39th step. No subsequent steps can be written. In this case, press AC to release the error check.

•After the program is started, instruction steps are executed one after another and execution does not stop. But it is needed to halt execution for inputting a data or reading a result. This is accomplished by ENT and SHIFT HLT.


When the end of a program is reached, execution stops automatically and the state is displayed. So, HLT may be absent.

•Each function comprises a step of program. The depression of keys in a certain sequence produces a single program step if it generates a single function.

1) Functions generated by the depression of a single key

Ex.) Numeral value, +/−, +, −, ×, ÷, =, [(,)], sin, log, ENT,

Step No.	Instruction step
1	ENT
2	SHIFT $x \leq M$
3	SHIFT Min

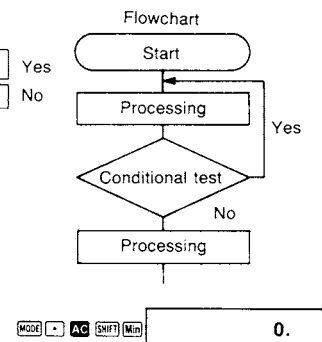

Memory cleared


(Designate P1)

	P1	0.
456	RUN	456.
P1 852	RUN	852.
P1 321	RUN	321.
753	RUN	753.
369	RUN	369.
741	RUN	741.
684	RUN	684.
643	RUN	643.
MR		852.

Maximum displayed

12/INTEGRALS

*To carry out integrals, ① define (write) function $f(x)$ during the LRN mode, then ② designate the interval of integral during the $\int dx$ mode.

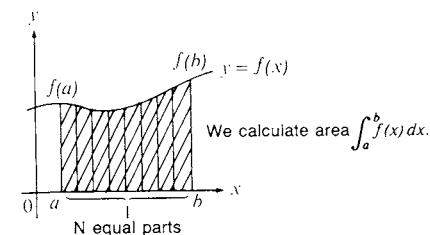

*The approximation method used for integrating the function written in P1 or P2 is the Simpson's rule. This method requires to divide the interval of integral into equal parts. If the number of divisions is not specified, the calculator determines it by itself according to the form of the function. To specify it, designate n (an integer of 1 to 9) which meets $N = 2^n$ where N is the number of divisions.

■ Defining function $f(x)$

- 1) Select the LRN mode (press **MODE** **EXP**).
- 2) Designate a program number (press **P1** or **P2**).
- 3) Press **SHIFT** **Min**.

*This is needed, as the first program step, to assign variable x of the function $f(x)$ to the M-register.

- 4) Write the expression of function $f(x)$ by true algebraic logic. Use **MR** to represent variable x . Write **=** at the end.

Ex.) For $f(x) = \frac{1}{x^2 + 1}$, write the sequence of 1, +, [(, MR, SHIFT x^2 , +, 1,)], =.

- 5) Press **MODE** **1** to select the $\int dx$ mode.

Note: For a function $f(x)$ whose variable x cannot take the zero value, input an appropriate number in between steps 1) and 2) above.
Do not use constant registers, **KAC**, **ENT** and **HLT** during expressing a function (step 4).

■ Execution of integral

- 1) Select the $\int dx$ mode (press **MODE** **1**).
- 2) Designate the program number assigned to the function, $f(x)$. (Press **P1** or **P2**.)
- 3) Press a sequence of n **SHIFT** **RUN** to specify division number N (this will be displayed). This step may be skipped.
- 4) Designate the interval of integral, $[a, b]$. (Press **a** **RUN** **b** **RUN**.)

*In seconds or minutes the result will be displayed in a floating point representation.

: this time the memory registers contain the following data.

1-register (Press **Kout** **1**) a
 2-register (Press **Kout** **2**) b
 3-register (Press **Kout** **3**) $N (= 2^n)$
 4-register (Press **Kout** **4**) $f(a)$
 5-register (Press **Kout** **5**) $f(b)$
 6-register (Press **Kout** **6**) $\int_a^b f(x) dx$
 -register (Press **MR**) a

x.) For $f(x) = 2x^2 + 3x + 4$, calculate $\int_2^5 f(x) dx$ and $\int_2^8 f(x) dx$.

(Select LRN mode) **MODE** **EXP** **LRN** **P1 P2** **0.**
 (Designate program No.) **P1** **LRN** **P1** **0.**
SHIFT **MIN** **LRN** **P1** **0.**
 (Write $f(x)$) **2** **×** **MR** **SHIFT** **X²** **+** **3** **×** **MR** **+** **4** **=**

Writing $f(x)$

(Select $\int dx$ mode) **MODE** **1** $\int dx$ **4.**
 (Designate program No.) **P1** $\int dx$ **P1** **0.**
 (Input n) **2** **SHIFT** **RUN** $\int dx$ **P1** **4.**
 N displayed
 (Input a and b) **2** **RUN** **5** **RUN** $\int dx$ **1.215000000** **0 2**
 Result displayed in about 4 seconds

$\int_2^5 f(x) dx$

(Designate program No.) **P1** $\int dx$ **P1** **0.**
 (Input a and b) **2** **RUN** **8** **RUN** $\int dx$ **4.500000000** **0 2**
 Result displayed in about 6 seconds

$\int_2^8 f(x) dx$

Kout 1	$\int dx$	2.	a
Kout 2	$\int dx$	8.	b
Kout 3	$\int dx$	8.	N
Kout 4	$\int dx$	18.	$f(a)$
Kout 5	$\int dx$	156.	$f(b)$
Kout 6	$\int dx$	450.	$\int_a^b f(x) dx$

■ Remarks for execution of integrals

- *If you press **AC** during execution of integral (nothing is displayed), the execution will be aborted and the state selected by the depression of **MODE** **1** entered.
 - *If no function $f(x)$ is defined (written in), the calculator will carry out integral for $f(x) = x$.
 - *It is normal to set the angular mode to "**DEG**" when executing integral of trigonometrics.
 - *Integral approximated by the Simpson's rule may take much execution time to raise the accuracy of result. Error may be large even when much execution time has been consumed. If the number of significant digits of result is smaller than one, error termination occurs ("E" displayed).
 - In such cases, dividing the integral interval will reduce execution time and raise accuracy:
1. If the result varies greatly when the integral interval is moved slightly:
Divide the interval into sections and sum up the results obtained in the sections.
 2. For a periodic function or if the value of integral becomes positive or negative depending on the interval:
Calculate for each period or separately for the sections where the result of integral is positive from where the result is negative, and sum up the results obtained.
 3. If long execution time is due to the form of the function defined:
Divide the function, if possible, into terms, execute integral for each term separately, and sum up the results.

13/SPECIFICATIONS

BASIC OPERATIONS

4 basic calculations, constants for $+$, $-$, \times , \div , $\sqrt{\quad}$, $\sqrt[n]{\quad}$, π , e , \ln , \log , \sinh , \cosh , \tanh , \sinh^{-1} , \cosh^{-1} , \tanh^{-1} , \arcsin , \arccos , \arctan , \sinh^{-1} , \cosh^{-1} , \tanh^{-1} , \arcsin , \arccos , \arctan , parenthesis calculations and memory calculations.

BUILT-IN FUNCTIONS

Trigonometric/inverse trigonometric functions (with angle in degrees, radians or grads), hyperbolic/inverse hyperbolic functions, common/natural logarithms, exponential functions (common antilogarithms, natural antilogarithms), powers, roots, square roots, cube roots, squares, reciprocals, factorials, conversion of coordinate system ($R \rightarrow P$, $P \rightarrow R$), permutations, combinations, random number, π , fractions, percentages, binary, octal, decimal and hexadecimal calculations and logical operations.

STATISTICAL FUNCTIONS

Standard deviation, linear regression, logarithmic regression, exponential regression, and power regression.

INTEGRALS

Simpson's rule.

MEMORY

1 independent memory and 6 constant memories.

CAPACITY

Entry/basic calculations

10-digit mantissa, or 10-digit mantissa plus 2-digit exponent up to 10^{-99}

Fraction calculations

Total of integer, numerator and denominator must be within 10 digits (includes division marks).

Scientific functions

Input range

$\sin x / \cos x / \tan x$	$ x < 9 \times 10^9$ degrees ($< 5 \times 10^7 \pi$ rad, $< 10^{10}$ gra)
$\sin^{-1} x / \cos^{-1} x$	$ x \leq 1$
$\tan^{-1} x$	$ x < 10^{100}$
$\sinh x / \cosh x$	$ x \leq 230.2585092$
$\tanh x$	$ x < 10^{100}$
$\sinh^{-1} x$	$ x < 5 \times 10^{99}$
$\cosh^{-1} x$	$1 \leq x < 5 \times 10^{99}$
$\tanh^{-1} x$	$ x < 1$
$\log x / \ln x$	$10^{-99} \leq x < 10^{100}$
e^x	$-10^{100} < x \leq 230.2585092$
10^x	$-10^{100} < x < 100$
x^y	$\begin{cases} x > 0 \rightarrow -10^{100} < y \cdot \log x < 100 \\ x = 0 \rightarrow y > 0 \\ x < 0 \rightarrow y : \text{integer or } 1/2n + 1 (n : \text{integer}) \end{cases}$
$x^{1/n}$	$\begin{cases} x > 0 \rightarrow y \neq 0 - 10^{100} < 1/y \cdot \log x < 100 \\ x = 0 \rightarrow y > 0 \\ x < 0 \rightarrow y : \text{odd number or } 1/n (n : \text{integer}) \end{cases}$
\sqrt{x}	$0 \leq x < 10^{100}$
x^2	$ x < 10^{50}$
$\sqrt[3]{x}$	$ x < 10^{100}$
$1/x$	$ x < 10^{100} (x \neq 0)$
$x!$	$0 \leq x \leq 69 (x : \text{integer})$
nPr/nCr	$0 \leq r \leq n, n < 10^{10} (n, r : \text{positive integer})$
	*Certain combinations or permutations may cause errors due to overflow during internal calculations.
REC \rightarrow POL	$\sqrt{x^2 + y^2} < 10^{100}$
POL \rightarrow REC	$ \theta < 9 \times 10^9$ degrees ($< 5 \times 10^7 \pi$ rad, $< 10^{10}$ gra), $0 \leq r < 10^{100}$

π up to second

π 10 digits

*Output accuracy

± 1 in the 10th digit.

Binary	Positive : $0 \leq x \leq 1111111111$ Negative: $1000000000 \leq x \leq 1111111111$
Octal	Positive : $0 \leq x \leq 3777777777$ Negative: $4000000000 \leq x \leq 7777777777$
Decimal	Positive : $0 \leq x \leq 2147483647$ Negative: $-2147483648 \leq x < 0$
Hexadecimal	Positive : $0 \leq x \leq 7FFFFFFF$ Negative: $80000000 \leq x \leq FFFFFFFF$

*Errors are cumulative with such internal continuous calculations as x^y , $x^{1/y}$, $x!$, $\sqrt[3]{x}$, nPr , nCr so accuracy may be adversely affected.

*In $\tan x$, $|x| \neq 90^\circ \times (2n+1)$, $|x| \neq \pi/2 \text{ rad} \times (2n+1)$, $|x| \neq 100 \text{ gra} \times (2n+1)$ (n is an integer.)

*With $\sinh x$ and $\tanh x$, errors are cumulative and adversely affected when $x=0$.

PROGRAMMABLE FEATURES

Total number of steps: up to 38 (1 step performs a function).

Jump: Unconditional jump (RTN), Conditional jump ($x > 0$, $x \leq M$).

Number of programs storable: up to 2 (P1 and P2).

DECIMAL POINT

Full floating with underflow.

EXPONENTIAL DISPLAY

Norm 1 — $10^{-2} > |x|$, $|x| \geq 10^{10}$

Norm 2 — $10^{-9} > |x|$, $|x| \geq 10^{10}$

READ-OUT

Liquid crystal display, suppressing unnecessary 0's (zeros).

POWER SOURCE

Power source: Amorphous silicon solar cell, lithium battery (GR927)

Lithium battery life: 6 years with GR927 (1-hour daily use).

AMBIENT TEMPERATURE RANGE

$0^\circ\text{C} - 40^\circ\text{C}$ ($32^\circ\text{F} - 104^\circ\text{F}$)

DIMENSIONS

$8.5 \text{ mm H} \times 73 \text{ mm W} \times 140 \text{ mm D}$ ($3/8'' \text{ H} \times 2 7/8'' \text{ W} \times 5 1/2'' \text{ D}$)

WEIGHT

60 g (2.1 oz)